



UNIVERSAL LEAD WIRING GUIDE

Mechanical Limit Motor

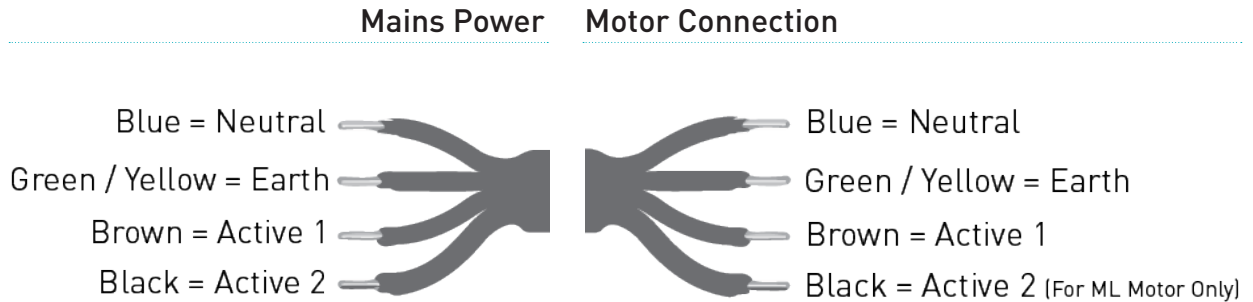


Electronic Limit Motor

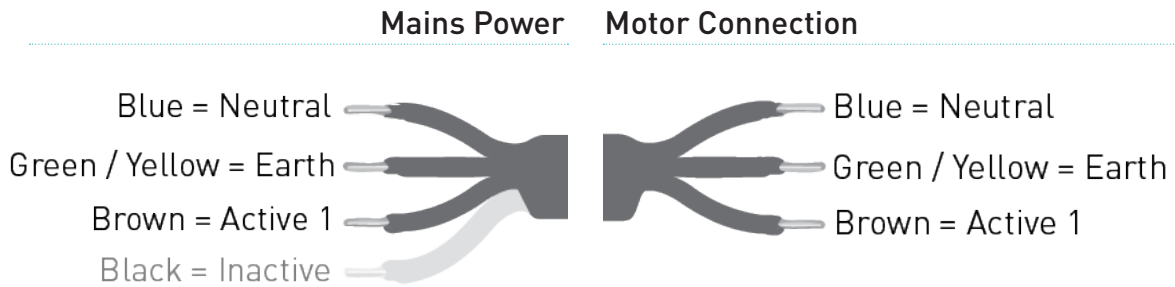

* Leave black wire disconnected for EL Motor.

Molex Connector Tail

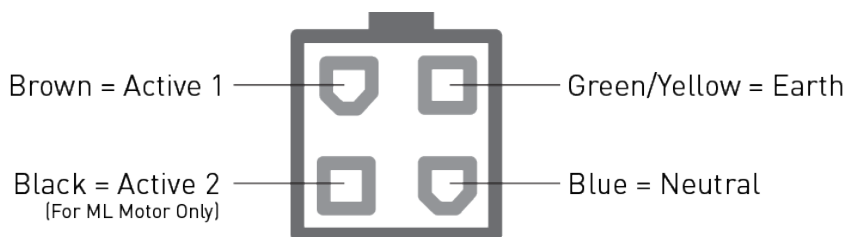

WARNING

ELECTRICAL HAZARD!

Power shall only be supplied to this cable once male & female connectors are correctly coupled.

Isolate power prior to connecting or disconnecting this motor.

This connector **must not** be accessible to the end user. It shall be placed within a pelmet box or within a housing in accordance to AS/NZS 60335:1:2002

Failure to do so could compromise personal safety.