


Setting Top and Bottom Stops on a Allen key Motor
(cbus BMS)

	Back rolled fabric	Direction	Front rolled fabric
Top Stop position	Front Hole	up = + down = -	Back Hole
Bottom Stop position	Back Hole	up = - down = +	Front Hole

Directions

Anti-Clockwise

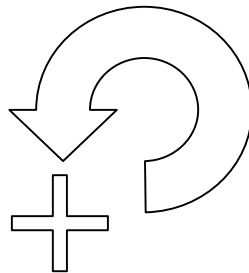

Clockwise

